

# UltraMatrix AV DVI

16x16 DVI VIDEO MATRIX SWITCH

## INSTALLATION AND OPERATIONS MANUAL





## LIMITED WARRANTY

Rose Electronics warrants the UltraMatrix AV DVI to be in good working order for one year from the date of purchase from Rose Electronics or an authorized dealer. Should this product fail to be in good working order at any time during this one-year warranty period, Rose Electronics will, at its option, repair or replace the Unit as set forth below. Repair parts and replacement units will be either reconditioned or new. All replaced parts become the property of Rose Electronics. This limited warranty does not include service to repair damage to the Unit resulting from accident, disaster, abuse, or unauthorized modification of the Unit, including static discharge and power surges.

Limited Warranty service may be obtained by delivering this unit during the one-year warranty period to Rose Electronics or an authorized repair center providing a proof of purchase date. If this Unit is delivered by mail, you agree to insure the Unit or assume the risk of loss or damage in transit, to prepay shipping charges to the warranty service location, and to use the original shipping container or its equivalent. You must call for a return authorization number first. Under no circumstances will a unit be accepted without a return authorization number. Contact an authorized repair center or Rose Electronics for further information.

ALL EXPRESS AND IMPLIED WARRANTIES FOR THIS PRODUCT INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO A PERIOD OF ONE YEAR FROM THE DATE OF PURCHASE, AND NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, WILL APPLY AFTER THIS PERIOD. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU.

IF THIS PRODUCT IS NOT IN GOOD WORKING ORDER AS WARRANTED ABOVE, YOUR SOLE REMEDY SHALL BE REPLACEMENT OR REPAIR AS PROVIDED ABOVE. IN NO EVENT WILL ROSE ELECTRONICS BE LIABLE TO YOU FOR ANY DAMAGES INCLUDING ANY LOST PROFITS, LOST SAVINGS OR OTHER INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OF OR THE INABILITY TO USE SUCH PRODUCT, EVEN IF ROSE ELECTRONICS OR AN AUTHORIZED DEALER HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, OR FOR ANY CLAIM BY ANY OTHER PARTY.

SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR CONSUMER PRODUCTS, SO THE ABOVE MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH MAY VARY FROM STATE TO STATE.

NOTE: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

IBM, AT, and PS/2 are trademarks of International Business Machines Corp. Microsoft and Microsoft Windows are registered trademarks of Microsoft Corp. Any other trademarks mentioned in this manual are acknowledged to be the property of the trademark owner.

# FCC/IC STATEMENTS, EU DECLARATION OF CONFORMITY

## Product

UltraMatrix AV DVI,

This equipment generates, uses and can radiate radio frequency energy and if not installed and used properly, that is in strict accordance with the manufacturer's instructions may cause interference to radio communication. It has been tested and found to comply with the limits for a Class A digital device in accordance with the specifications of Part 15 of FCC rules, which are designed to provide reasonable protection against such interference when the equipment is operated in a commercial environment. Operation of this equipment in a residential area is likely to cause interference, in which case the user at his own expense will be required to take whatever measures may be necessary to correct the interference.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This digital apparatus does not exceed the Class A limits for radio noise emission from digital apparatus set out in the Radio Interference Regulation of Industry Canada.

Operation is subject to the following two conditions:

- 1- This device may not cause harmful interference
- 2- This device must accept any interference received including interference that may cause undesired operation.

Le présent appareil numérique n'émet pas de bruits radioélectriques dépassant les limites applicables aux appareils numériques de la classe A prescrites dans le Règlement sur le brouillage radioélectrique publié par Industrie Canada.

## CE Statement

The product meets European Standard EMC:

EN-55022:2006 Class A

EN 61000-4-2:2001

EN 61000-4-3:2006

EN 61000-4-4:2004

EN 61000-4-5:2006

# TABLE OF CONTENTS

<b>Contents</b>	<b>Page #</b>
Introduction.....	2
Disclaimer.....	2
Features.....	2
Specifications.....	3
Package contents.....	3
System Application.....	4
Installation.....	5
Operation.....	6
Front Panel Control.....	6
Using the RoseControl Software.....	8
Service Information.....	12
Maintenance and Repair.....	12
Technical Support.....	12
Product Safety.....	13

<b>Appendices</b>	<b>Page #</b>
Appendix A – Setting up the IP address on the UMA-16Dx16D/RCI.....	14

<b>Figures</b>	<b>Page #</b>
<i>Figure 1. System Application Overview.....</i>	<i>4</i>
<i>Figure 2. Connection Diagram.....</i>	<i>5</i>
<i>Figure 3. Front Panel Buttons.....</i>	<i>6</i>
<i>Figure 4. UltraMatrix AV DVI Default Display.....</i>	<i>6</i>
<i>Figure 5. Main Menu.....</i>	<i>7</i>
<i>Figure 6. Input Display.....</i>	<i>7</i>
<i>Figure 7. RoseControl Configuration Screen.....</i>	<i>8</i>
<i>Figure 8. Main Routing Window.....</i>	<i>9</i>
<i>Figure 9. Routing Window, Modified Connections.....</i>	<i>10</i>
<i>Figure 10. Connecting the Network Cable.....</i>	<i>14</i>
<i>Figure 11. RoseControllP Login screen.....</i>	<i>14</i>
<i>Figure 12. RoseControllP Main Page.....</i>	<i>15</i>
<i>Figure 13. RoseControllP Network Setting page.....</i>	<i>15</i>

## Introduction

---

Thank you for choosing Rose Electronics® UltraMatrix AV™ DVI for your DVI video switching requirements. The UltraMatrix AV DVI is designed especially for control rooms, video presentations, security centers, video wall displays, and many other digital media applications.

The ease of switching video sources makes the UltraMatrix AV DVI a versatile and flexible addition to your system. Up to 16 video sources can be switched to any selected output port. The video switching can be controlled by the front panel, the RS232 input using a PC Windows based software, through a web browser (on some models) or serial commands sent to the RS232 port.

The UltraMatrix AV DVI supports resolutions up to 1920 x 1200 for high quality imagery. Repetitive switching sequences can be recorded and saved in 1 of 50 macros for playback at any time.

The access software makes switching the selected input to an output fast and easy. Just click on the input source and then the output destination and the video is instantly switched.

Installation consists of two procedures:

1. Connecting the video sources and destination monitors to the unit
2. Installing the access software for controlling the UltraMatrix AV DVI.

Each video source is connected to one of the sixteen video in, DVI-I connectors using a DVIM to DVIM cable

## Disclaimer

---

While every precaution has been taken in the preparation of this manual, the manufacturer assumes no responsibility for errors or omissions. Neither does the manufacturer assume any liability for damages resulting from the use of the information contained herein. The manufacturer reserves the right to change the specifications, functions, or circuitry of the product at any time without notice.

The manufacturer cannot accept liability for damages due to misuse of the product or other circumstances outside the manufacturer's control. The manufacturer will not be responsible for any loss, damage, or injury arising directly or indirectly from the use of this product.  
(See limited warranty)

## Features

---

- Switch one of sixteen video signals to multiple monitors
- Supports DVI-D Singlelink operating at the maximum rate of 2 x 1.65 Gbps
- Supports resolutions up to 1920 x 1200
- Click and switch intuitive software for instant video switching
- Multiple EDID support with EDID learning from any display
- Optional Infrared remote control and TCP/IP control.

## Specifications

---

<b>Video</b>	
Format	DVI-D Single Link
Maximum Pixel Clock	165 MHz
Video Connectors (In / Out)	DVI-D (29 pin female)
Resolution	Up to 1920 x 1200
DDC	5 Volts p-p (TTL)
Input Equalization	Automatic
Cable Length (In / Out)	Up to 30 ft.
<b>Other</b>	
Warranty	Limited 1 Year Parts and Labor
Control	Panel, RS-232 (IR and TCP/IP optional)
Power	Internal 100-240 VAC
Dimensions	19" W x 5.25" H (2U) x 7" D
Weight	10 lbs.
DVR 16X16 Approvals	FCC, CE, RoHS Compliant
Power Supply Approvals	UL, CE, CSA, CEC, RoHS
<b>Environmental</b>	
Operating Temperatures	0 to +40° C (+32° to 104° F)
Operating Humidity	10% to 85% (Non-condensing)
Storage Temperature	-20° to +60° (+20° to +148° F)
Storage Humidity	10% to 85% (Non-condensing)

## Package contents


---

Your extender package contains the following items:

- UltraMatrix AV DVI unit
- Serial Cable
- 1 country specific power cord

## System Application

---

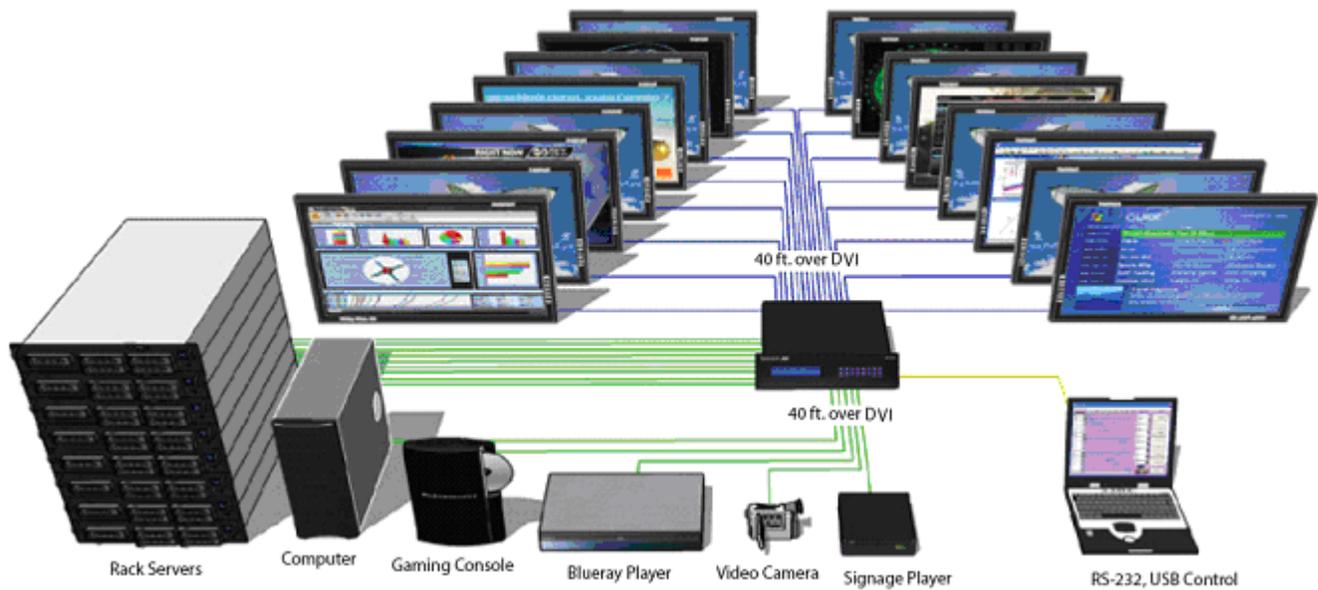

*Figure 1. System Application Overview*

- Corporate or Educational Presentations
- Financial (Remote servers)
- Call Centers for Technical Support
- Industrial (Long-Range Workstation Isolation)
- Airport Installations (Air Traffic Control/Passenger Information)
- Medical (Remote viewing away from Sensitive/Magnetic Equipment)

## Installation

- Turn off all input devices and displays.
- Connect the male to male DVI extension cables to the input devices and to the “IN” ports on the UltraMatrix AV DVI.
- Connect the displays to the “OUT” ports on the UltraMatrix AV DVI.
- Connect the power cord and power-on the UltraMatrix AV DVI.
- Power on the input devices and the displays.

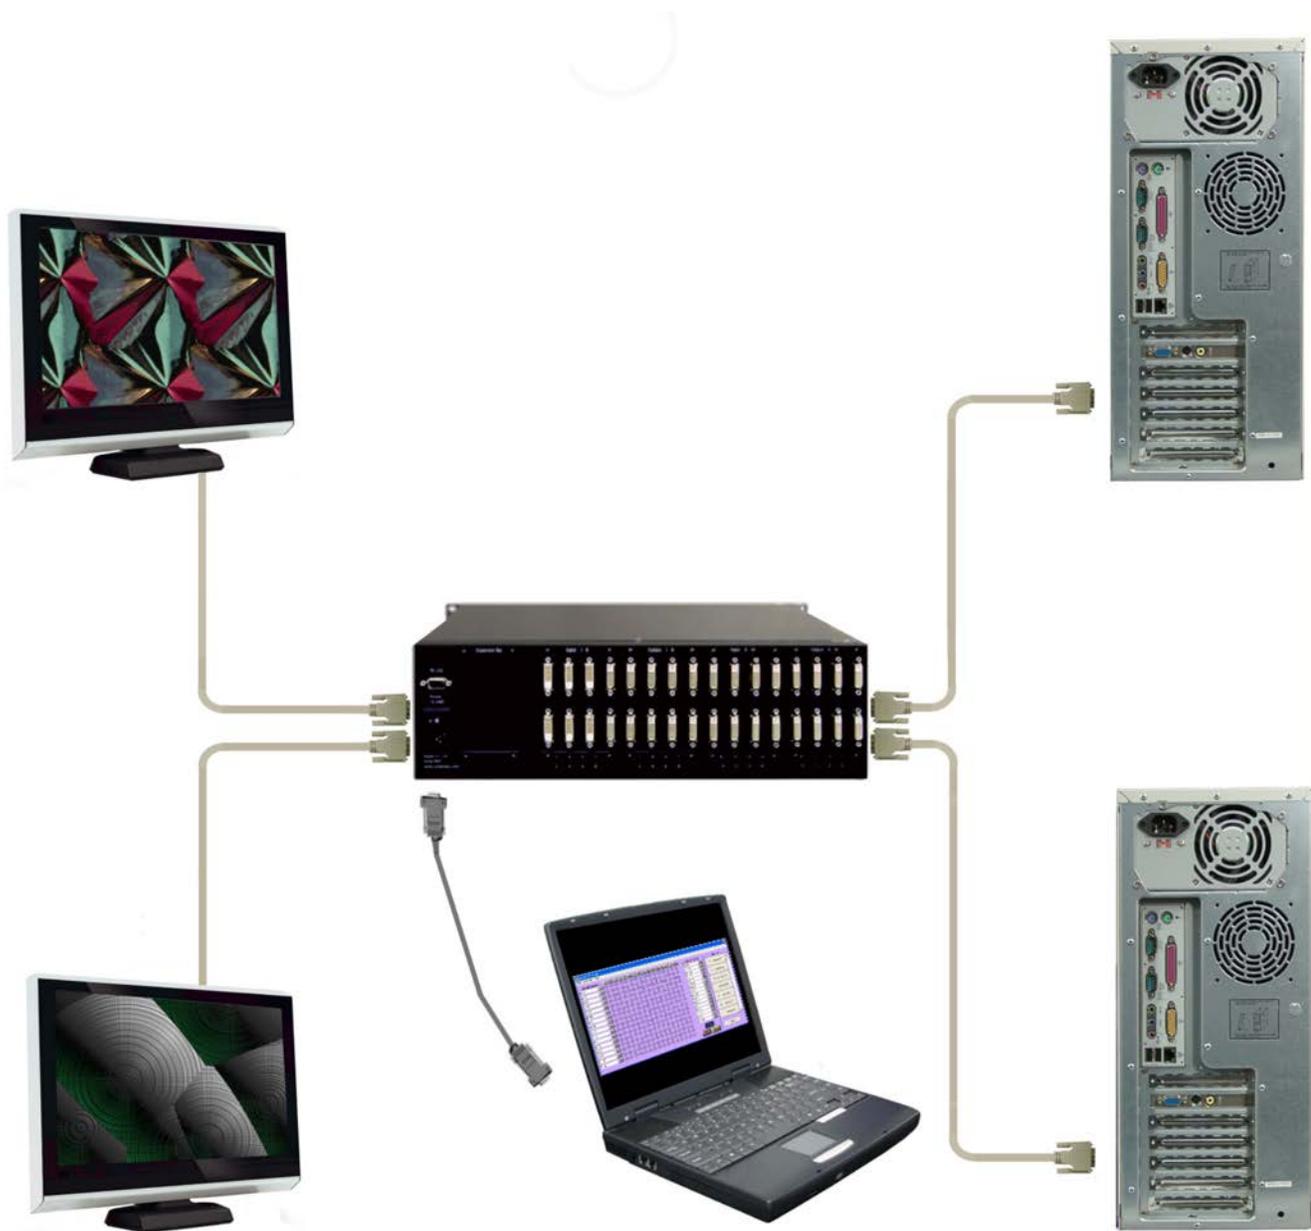


Figure 2. Connection Diagram

## Operation

---

The UltraMatrix AV DVI can be controlled using either the front panel or the RoseControl software.

### Front Panel Control

---

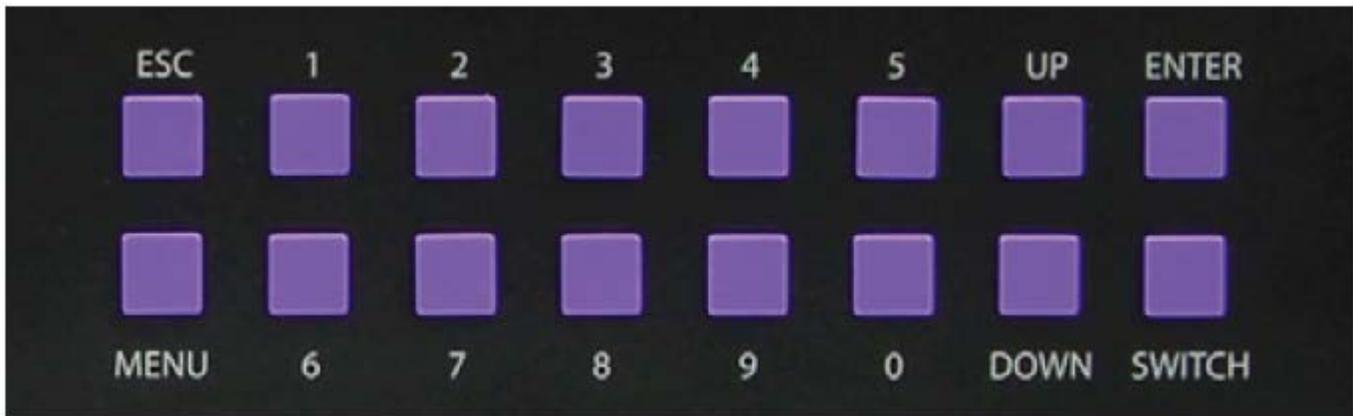


Figure 3. Front Panel Buttons

NOTE: To lock the front panel buttons to avoid any accidental changes, press ESC + MENU + ENTER + SWITCH at the same time. The display will indicate that it is locked. Repeat the procedure to unlock the front panel.

During normal operation, you will see a list of ports on the front panel display:

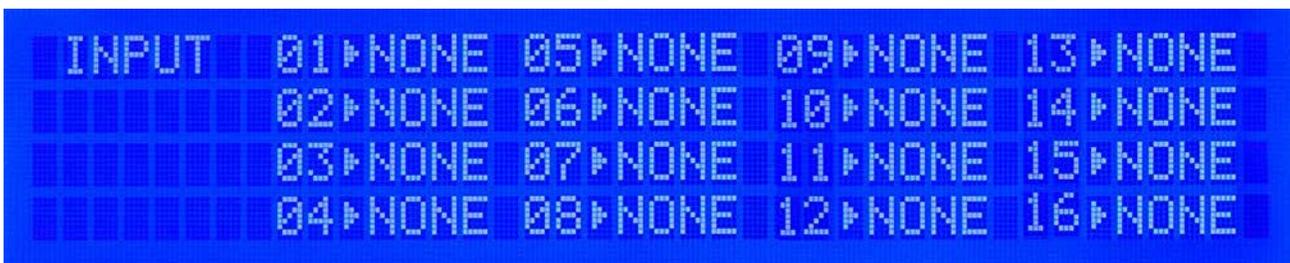


Figure 4. UltraMatrix AV DVI Default Display

To assign an output to an input, press SWITCH. A blinking block cursor will appear. Use UP and DOWN to select the input that you would like to assign. Once the cursor is over the desired input port, press ENTER to enter editing mode. Press UP and DOWN to select the output port. Once you have selected an output, press ENTER to save the configuration. To escape from editing mode, press ESC.

To view the menu, press MENU. There are 6 menu options available:



Figure 5. Main Menu

Manage EDID - Gives the option to learn the EDID of your display or choose a programmed EDID that is compatible with your monitor.

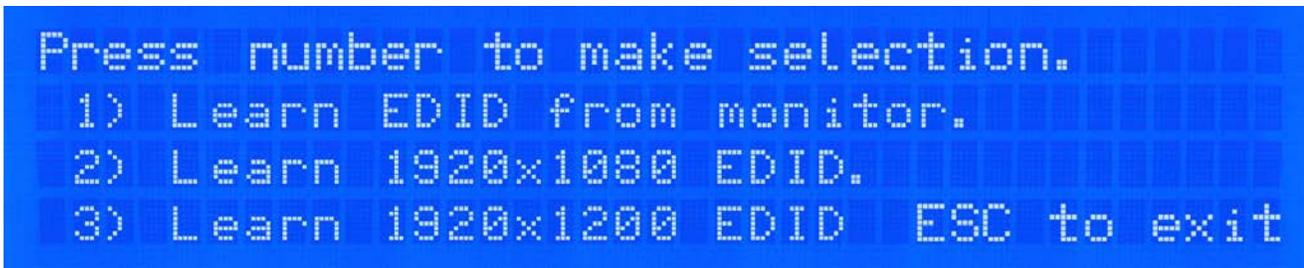


Figure 6. Input Display

RS-232 Acknowledge - Sets the UltraMatrix AV DVI to send a confirmation that an RS-232 command has been received.

Send Update - Sets the UltraMatrix AV DVI to send an RS-232 command back to the controller when the configuration is changed via the front panel or remote control (optional).

Memory Save - Sets the UltraMatrix AV DVI to save the configuration when powered off.

Display Input Status - This displays the status of the inputs. If no input is present, the display will read NONE. This is the default view.

Restore Factory Settings - Sets the UltraMatrix AV DVI to the default factory configuration

## Using the RoseControl Software

---

Find the Installation CD that came with your UltraMatrix AV DVI unit. This CD has the RoseControl software that you will need in order to control the unit using a computer.

Insert the CD into your CD-ROM. On the CD you should see:

- RoseControl\_Installer.exe
- RoseControl Help File
- UltraMatrix AV DVI Manual in PDF format

Double click RoseControl\_Installer.exe in order to initiate software installation. Click Install. After installation has completed, click CLOSE.

In order to use the software, click on the **START button>Programs>RoseControl**. There you should see a help file, the RoseControl launcher as well as a shortcut to uninstall RoseControl. Click on RoseControl in order to launch the software.

When the software starts you will see a screen like this (UltraMatrix AV DVI 16X16 Shown):

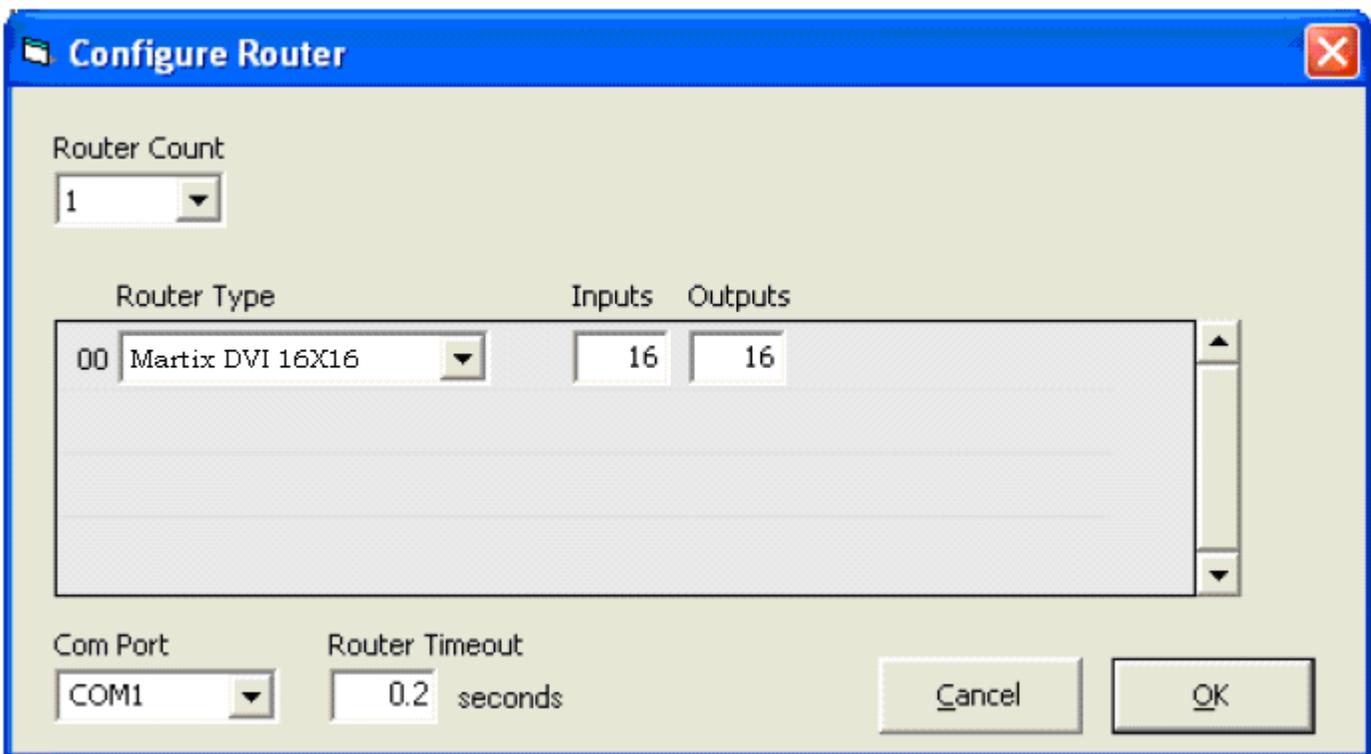


Figure 7. RoseControl Configuration Screen

**Router Type:** Select “Matrix DVI 16x16”

**Inputs/Outputs:** Enter the number of Inputs/Outputs for your UMAV DVI 16x16.

**Com Port:** Select the appropriate com port that your computer is using to access the router.

**Router Time out:** By default this is 0.2, meaning the computer acknowledges commands almost instantly.

After you have entered the necessary information, click OK. This will now take you to the Main Routing Window where you can route the different video/ audio connections.

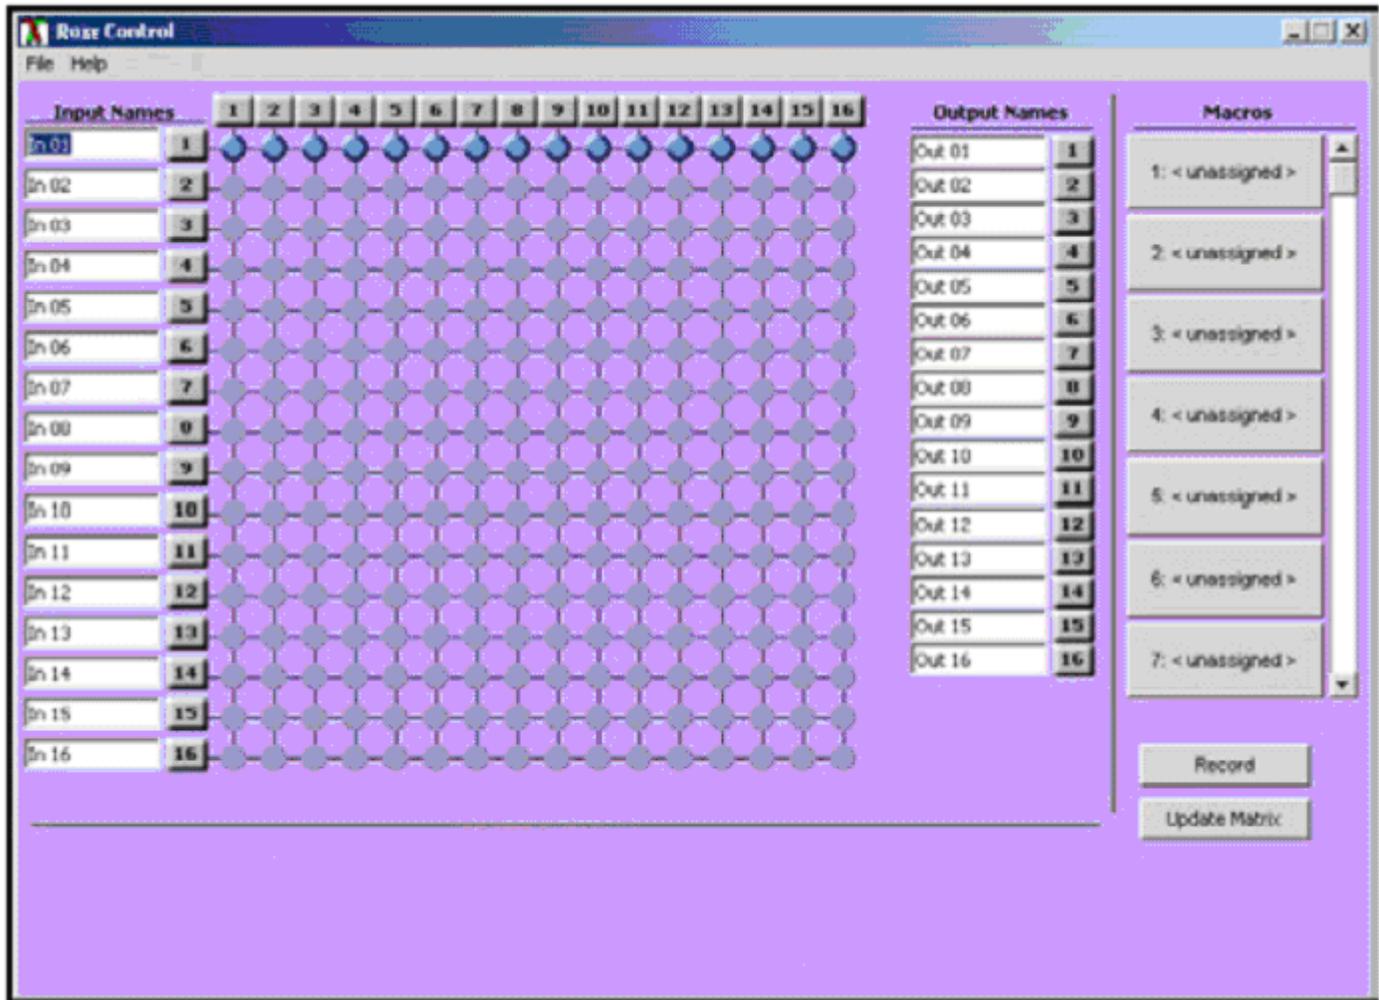


Figure 8. Main Routing Window

On this screen you will notice the input buttons running down the left side while the output buttons run across the top. They are labeled 1 through 16.

The Main Routing Window enables you to control the router’s connections by means of the crosspoint panel, the buttons, or with pre-recorded routes called macros.

**Crosspoint Panel:** This is probably the simplest way to route the connections. Simply click on the cross point itself. The input on the left will then be routed to the output above.

Note: Inputs can be routed to several different outputs, but each output can only have a single input at any one time. So you can have several connections horizontally but not vertically.

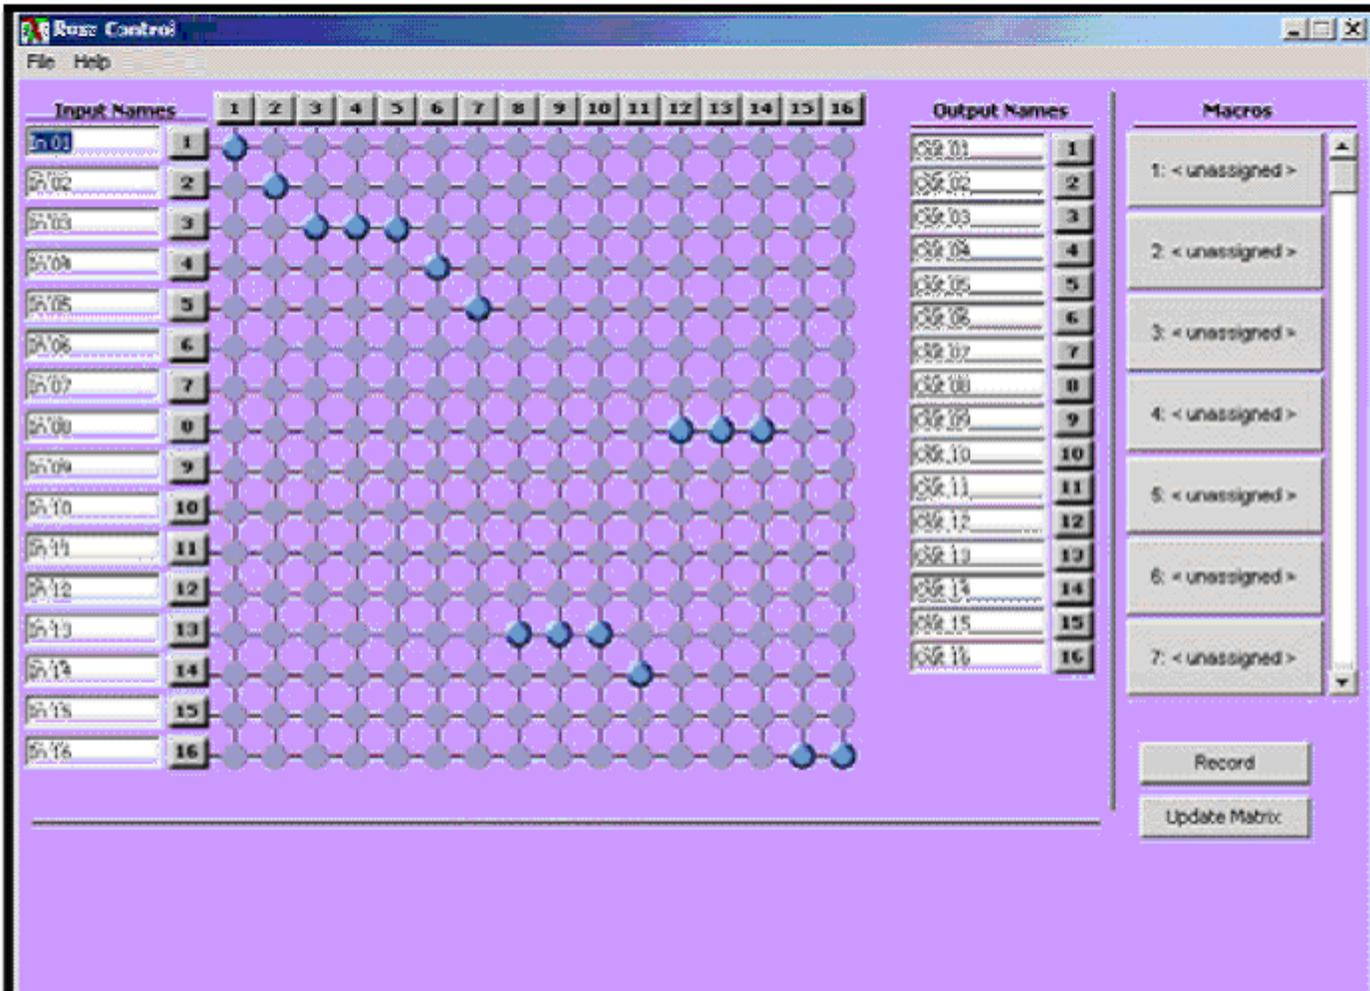


Figure 9. Routing Window, Modified Connections

**The Button Panel:** These are the numbered buttons across the top and left sides. Click an output button on the top, and then click an input button on the left.

Options for using the Button Panel:

- **Output Options:** To select multiple outputs next to each other, click on one output, then hold the shift key down and click the last output. When the input is clicked, it is routed to all selected outputs. To select multiple outputs individually, hold the control key down and click on any number of outputs. When the input is clicked, it is routed to all selected outputs.
- **Input Options:** To route an input to all the outputs at once, hold the control key down and click on an input. To leave the outputs selected after the route is made, hold the shift key down and click on an input.

**Macros:** This section of the window is used to save and play back macros. Macros store a set sequence of routes.

To record a macro:

1. Click on the Record button (last button shown). A blinking “recording” message below this button will be displayed to indicate that all routes are being recorded.
2. Select the desired crosspoints. There is no limit on the number of routes you may record.
3. If you click a macro button while in the record mode, the macro will be executed, and these routes will be added to the recording. This makes it possible to combine the routes of two or more macros into one bigger macro.
4. When finished, click the “Save Macro” button. You will be instructed to then click on one of the macro buttons. Doing this will save the recorded routes to that button. To cancel saving the macro, click the “Cancel Save” button.
5. To play back a macro, simply click on one of the 50 macro buttons. Use the scroll bar to bring any of these into view.
6. The macros are automatically saved in the current configuration file. They are also saved when you select the File/Save Configuration... menu. To save macros in a separate file for a special purpose, select the File/Save Macros...menu.

## Service Information

---

### Maintenance and Repair

---

This Unit does not contain any internal user-serviceable parts. In the event a Unit needs repair or maintenance, you must first obtain a Return Authorization (RA) number from Rose Electronics or an authorized repair center. This Return Authorization number must appear on the outside of the shipping container. See Limited Warranty for more information.

When returning a Unit, it should be double-packed in the original container or equivalent, insured and shipped to:

Rose Electronics  
Attn: RA \_\_\_\_\_  
10707 Stancliff Road  
Houston, Texas 77099 USA

### Technical Support

---

If you are experiencing problems, or need assistance in setting up, configuring or operating your product, consult the appropriate sections of this manual. If, however, you require additional information or assistance, please contact the Rose Electronics Technical Support Department at:

Phone: (281) 933-7673  
E-Mail: [TechSupport@rose.com](mailto:TechSupport@rose.com)  
Web: [www.rose.com](http://www.rose.com)

Technical Support hours are from: 8:00 am to 6:00 pm CST (USA), Monday through Friday.

Please report any malfunctions in the operation of this Unit or any discrepancies in this manual to the Rose Electronics Technical Support Department.

## Product Safety

---

The UltraMatrix AV DVI has been tested for conformance to safety regulations and requirements, and has been certified for international use. Like all electronic equipment, the UltraMatrix AV DVI should be used with care. To protect yourself from possible injury and to minimize the risk of damage to the Unit, read and follow these safety instructions.

- Follow all instructions and warnings marked on this Unit.
- Except where explained in this manual, do not attempt to service this Unit yourself.
- Do not use this Unit near water.
- Assure that the placement of this Unit is on a stable surface or rack mounted.
- Provide proper ventilation and air circulation.
- Keep power cord and connection cables clear of obstructions that might cause damage to them.
- Use only power cords and connection cables designed for this Unit.
- Use only a grounded (three-wire) electrical outlet.
- Keep objects that might damage this Unit and liquids that may spill, clear from this Unit. Liquids and foreign objects might come in contact with voltage points that could create a risk of fire or electrical shock.
- Operate this Unit only when the cover is in place.
- Do not use liquid or aerosol cleaners to clean this Unit. Always unplug this Unit from its electrical outlet before cleaning.
- Unplug this Unit from the electrical outlet and refer servicing to a qualified service center if any of the following conditions occur:
  - The power cord or connection cables are damaged or frayed.
  - The Unit has been exposed to any liquids.
  - The Unit does not operate normally when all operating instructions have been followed.
  - The Unit has been dropped or the case has been damaged.
  - The Unit exhibits a distinct change in performance, indicating a need for service.

## Appendix A – Setting up the IP address on the UMA-16Dx16D/RCI

The UMA-16Dx16D/RCI model has an embedded network card. This is used to set the IP address of the unit. Once the IP address has been set, the video switching can be accomplished through any web browser. The procedure to set the initial IP address for the unit is detailed below.

The UMA-16Dx16D/RCI comes pre-configured with an IP address of 192.168.1.30 and IP network mask of 255.255.255.0. To connect to it through a network cable, the computer that is being used to configure the IP address of the unit should be on the same network.

1. Connect the unit's RJ45 port to a computer configured with an Ethernet card and Window's operating system (XP or Vista). Use a network cable to connect the computer to unit.

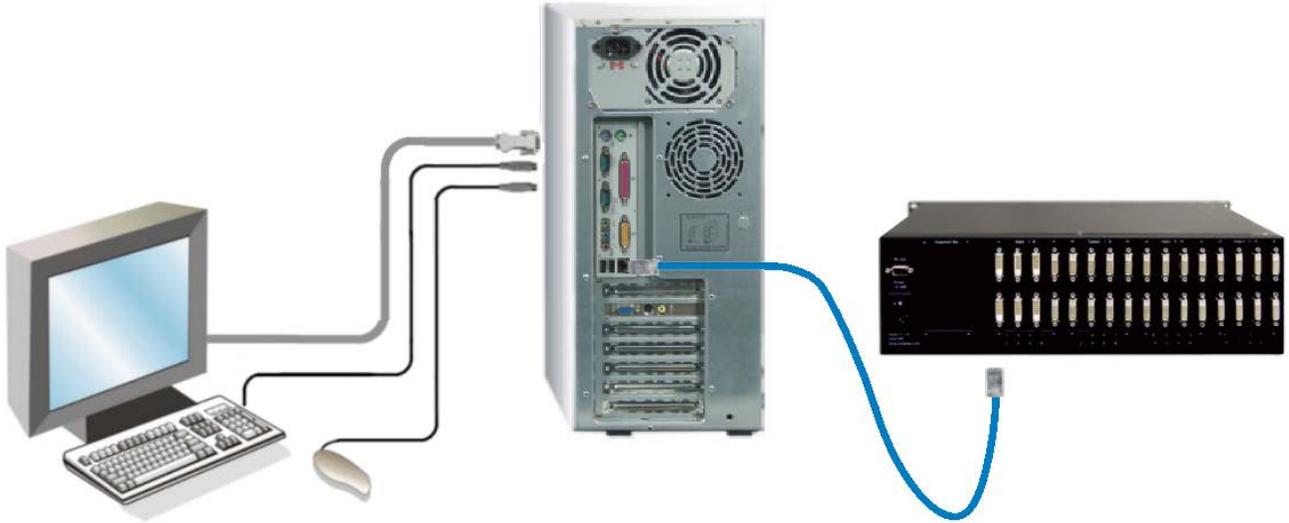


Figure 10. Connecting the Network Cable

2. Access the control panel, network tab on the computer being used to configure the unit and change the existing IP address to 192.168.1.25 and the IP network mask to 255.255.255.0. This change creates a compatible standalone network between the unit and the computer.
3. From the computer used to configure the unit, start a web browser and enter the IP address 192.168.1.30 (unit's default IP address) as the URL.
4. The unit will present the login screen as shown.

User ID:	<input type="text" value="Admin"/>
Password:	<input type="password" value="••••"/>
<input type="button" value="Click here to continue"/>	

Figure 11. RoseControlIP Login screen

The default User ID is **Admin** and the default Password is **Pass**. The User ID and Password are case-sensitive. Enter the User ID and Password and click the button to proceed to the next page.

5. If the correct User ID and Password are entered, the unit will display the following page in the browser.



Figure 12. RoseControlIP Main Page

6. Select the Network Setting tab on the top of the page. This will display the network settings for the unit in the Network Setting page.

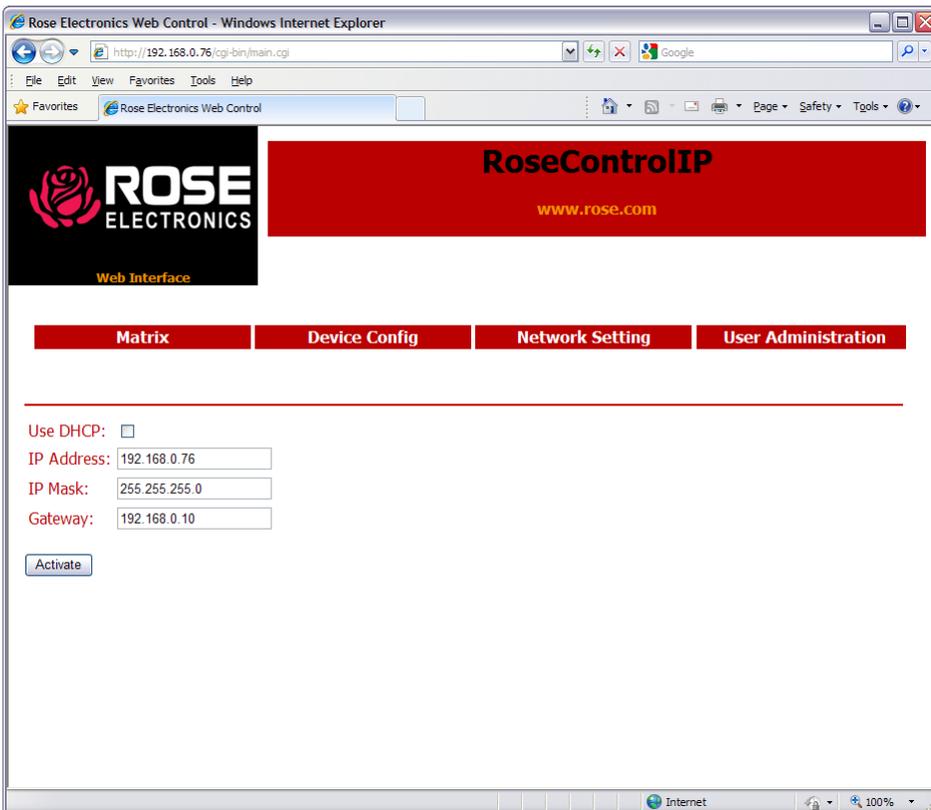


Figure 13. RoseControlIP Network Setting page

7. Enter the desired IP address and network mask for the unit, and click the Activate button to apply the entered settings.
8. The unit is now ready to be placed on the general network. Disconnect the unit from the computer and connect it directly to the network. Restore the previous IP address of the computer that was used to configure the unit, and connect it to the network.



Server Management



Solutions



10707 Standcliff Road  
Houston, Texas 77099

Phone: (281) 933-7673  
[WWW.ROSE.COM](http://WWW.ROSE.COM)